

Timer operation


1 Press the timer operation switch.

* Be sure to fully press the switch.




2 Press the air flow switch, and select "High" or "Normal".

* Be sure to fully press the switch.

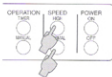

3 Turn "ON" the power ON/OFF switch.

 

4 At setting the OFF timer, the power switch is turned OFF automatically.

OFF timer setting method

A timer is equipped in the maintenance door, so you can set the time for stopping by rotating the dial.

- The timer is set at 10 hours as default.
- You can set the time from one hour to 30 hours.
- If the equipment is switched to timer operation during manual operation, the timer counts from starting manual operation. For example, if the equipment started manual operation with an 8-hour setting and was switched to timer operation 5 hours later, the equipment will stop 3 hours after that.

